





Quick Start Guide

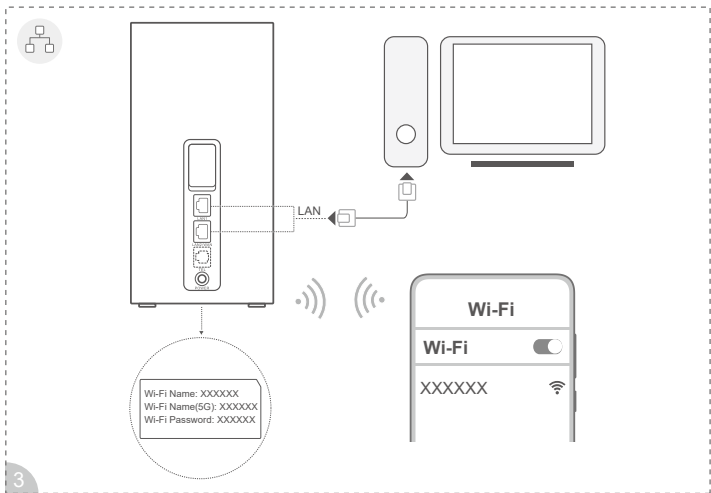

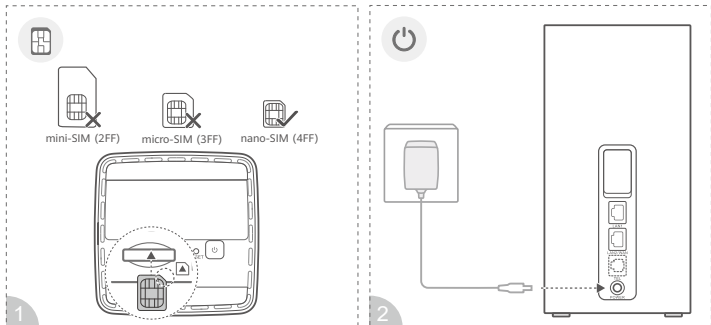

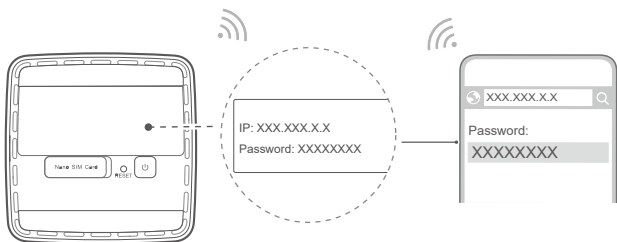

4

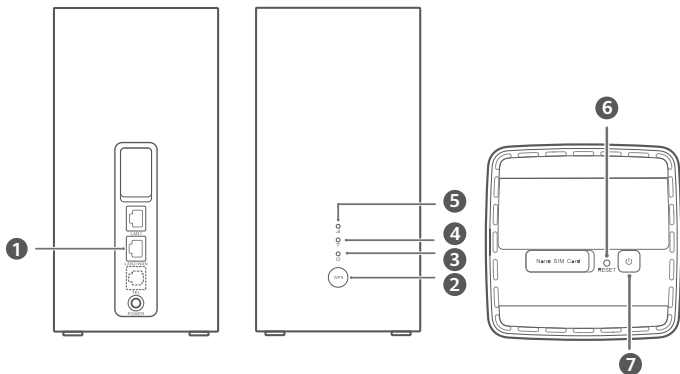

Getting Started

- 1 Insert a proper SIM card into the SIM card slot.
- 2 Connect the router's power adapter to a power supply. The router will then start up automatically and connect to the Internet.
- 3 Connect your Wi-Fi device to the Wi-Fi network of the router. For the default Wi-Fi name and password, refer to the nameplate on the router. If you are using a computer, connect the computer to the LAN port of the router using a network cable.
- 4 Log in to the web-based management page to manage your router, such as for changing the Wi-Fi name or password. For details about the default IP address and login password, refer to the nameplate on the router.

Overview

①	LAN/WAN port	· Connect a LAN device to the router to access the Internet, such as a computer or switch. · Connect the router to a wall-mounted Ethernet port for Internet access.
②	WPS button	When Wi-Fi is enabled, press to enable the WPS connection.  If you accidentally pressed the WPS button and the Wi-Fi indicator starts to flash, wait for it to stop flashing. This may take about two minutes.
③	Power indicator	Steady green: The router is powered on. Flashing green: The router is restoring to factory settings.
④	Wi-Fi® indicator	Steady on: Wi-Fi is enabled. Flashing: A device that can be paired is detected. Press the WPS button on the router, the Wi-Fi indicator will flash faster, and the device will connect to the router's Wi-Fi network.
⑤	Signal strength indicator	Steady green: Strong. Steady yellow: Moderate/Weak. Steady blue: Connected to Ethernet network. Steady red: Not connected to network.
⑥	Reset button	When the router is powered on, use a needle-type object to press and hold the Reset button, until the power indicator starts to flash. Release the button, and the router will restore to its factory settings.
⑦	Power button	Press and hold to power the router on or off.

Safety information

Learn more about our latest Safety Information at <https://www.soyea-tech.com>.

- Ideal temperatures: 0°C to 40°C for operating, -20°C to +70°C for storage.
- Avoid using the device in a dusty, damp, or dirty place, or near a magnetic field.
- Unplug the power adapter from electrical outlets and the device when not in use.
- For pluggable devices, the socket-outlet shall be installed near the devices and shall be easily accessible.
- Please consult your doctor and the device manufacturer to determine if using your device may interfere with the operation of your medical device.
- Ensure that the power adaptor meets the requirements of Annex Q of IEC/EN 62368-1 and has been tested and approved according to national or local standards.
- Warning: This equipment may not work when mains power fails.

Disposal and recycling information



The symbol on the product, battery, literature, or packaging means that the products and batteries should be taken to separate waste collection points designated by local authorities at the end of the lifespan. This will ensure that EEE waste is recycled and treated in a manner that conserves valuable materials and protects human health and the environment.

For more information, please contact your local authorities, retailer, or household waste disposal service or visit the website <https://www.soyea-tech.com>.

EU regulatory conformance

Hereby, SOYEA TECHNOLOGY CO., LTD. declares that this device B628-350 is in compliance with the following Directive: RED 2014/53/EU, RoHS 2011/65/EU, ErP 2009/125/EC.

The full text of the EU declaration of conformity, the detailed ErP information and most recent information about accessories & software are available at the following internet address:

<https://www.soyea-tech.com>.

Privacy Policy

To learn how we use and protect your personal information on this device, please access the web-based management page, and read the Privacy Statement for Mobile Broadband Devices to learn about our privacy policy.

Software Update

By continuing to use this device, you indicate that you have read and agree to the following content: In order to provide better service, this device will automatically obtain software update information from SOYEA or your carrier after connecting to the Internet. This process will use mobile data, and require access to your device's unique identifier (SN) and the service provider network ID (PLMN) to check whether your device needs to be updated.

This device supports the automatic update feature. Once enabled, the device will automatically download and install critical updates from SOYEA or your carrier. This feature is enabled by default, and can be configured from the settings menu on the web-based management page.

